


Returning the Navigation System to the Default or Factory Settings

You can return settings or recorded contents to the default or factory settings. There are four methods to clear user data, and the situations and the cleared contents are different for each method. For the contents that are cleared in each method, see the list presented later.

- ❑ The map data and the system data are not cleared from the hard disk drive by any clearing method.

Method 1: RESET button

Pressing the **RESET** button clears almost all settings of the audio function.

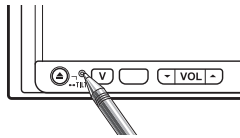

The system becomes the same state when the battery of the vehicle is removed or the yellow lead of the navigation system is disconnected.

Method 2: [Restore Factory Settings]


Clears some items in the **[Map]** menu and in the **[Settings]** menu.



- ☞ "Restoring the Default Setting" → Page 102

Method 3: [Reset] on start-up

Clears the setting values stored in the hard disk drive.

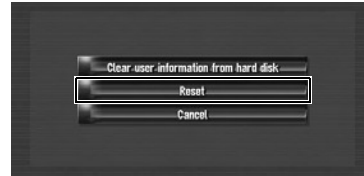

- ☞ "If system errors frequently occur" → Page 181

Method 4: [Clear user information from hard disk] on start-up

Clears all user data (including Music Library) stored in the hard disk drive.



- ☞ "Completely returning the navigation system" → Page 181

Setting items to be deleted

The items to be deleted vary depending on the reset method. The items listed in the following table return to the default or factory settings. The items not listed below will be retained.

However, if you carry out [Clear user information from hard disk], all the settings related to the navigation function including the items not listed below are deleted.

— : The setting will be retained.

✓ : The setting will be cleared and returned to the default or factory settings.

		Method 1	Method 2	Method 3	Method 4
Navigation functions					
Map function	View mode and scale setting on the map	—	—	✓	✓
	Direction of the map	—	—	✓	✓
	Last cursor position on the map screen	—	—	✓	✓
Route Setting	Current route	—	—	✓	✓
	Guidance state of the current route	—	—	✓	✓
	Vehicle position information	—	—	✓	✓
	Route conditions	—	✓	✓	✓
[Destination] menu	Auto fill-in function for cities and streets	—	—	✓	✓
	Point registered in [Address Book]	—	—	—	✓
	Sorting order selected in [Address Book]	—	—	✓	✓
[Information] menu	Sorting order selected in [Traffic Events], [Traffic On Route], and [Traffic Flow]	—	—	✓	✓
	[Traffic Settings]	—	—	✓	✓
	[Phone Settings] ([Phone Menu])	—	—	✓	✓
	[Phone Book], [Dial Favorites], [Dialed Numbers], [Received Calls] ([Phone Menu])	—	—	—	✓
	[Stock Info]	—	—	—	✓
	[My Favorites]	—	—	—	✓
	[Emergency Info]	—	—	✓	✓
[Map] menu	[Short-Cut Selection], [View Mode]	—	—	✓	✓
	[Displayed Info], [Overlay POI], [Day/Night Display], [AV Guide Mode], [Road Color]	—	✓	✓	✓
[Settings] menu	[Language] ([Regional settings]), [Time] ([Regional settings]), [Installation Angle Setup] ([Hardware]), [Defined Locations], [Modify Current Location], [Background Picture Setting]	—	—	✓	✓
	Items other than above	—	✓	✓	✓
	[Learning Status] ([Hardware]), [3D Calibration Status] ([Hardware])	—	—	—	—
[Vehicle Dynamics]	Right and left gauge type, [Adjust Look]	—	—	✓	✓
[Audio Settings]	All items	✓	—	—	—
[System Settings]	[Mute Set], [Clock DISP], [REC Mode]	✓	—	✓	✓
	Other items	✓	—	—	—

		Method 1	Method 2	Method 3	Method 4
Audio functions					
Music Library [LIBRARY]	Repeat, Random settings	✓	—	✓	✓
	Track data	—	—	—	✓
	Playlist	—	—	—	✓
	Last playback position	—	—	—	✓
[XM]	Alert on/off for My Mix	✓	—	✓	✓
[DVD]	All settings	✓	—	—	—
[CD]	All settings	✓	—	—	—
[ROM] [MP3]	All settings	✓	—	—	—
[FM]	Preset memory and the other settings	✓	—	—	—
[AM]	Preset memory and the other settings	✓	—	—	—
[TV]	Preset memory and the other settings	✓	—	—	—
[REAR SCREEN]	Rear Screen setting	✓	—	—	—
Others	Picture Adjust	✓	—	—	—
	Display Tilt	✓	—	—	—

If system errors frequently occur

If system errors frequently occur and the power to the navigation system turns off, inappropriate content may have been recorded in the memory or the hard disk drive. In such a case, normal operations may be restored by clearing the setting values stored in the hard disk drive. For the contents that are cleared, see the list presented later.

1 Start the engine.

After a few moments, the start-up screen comes on for a few seconds.

2 Touch and hold the MAP button while the start-up screen is displayed.

"Clear memory" screen appears.

3 Touch [Reset].

4 Touch [Yes].

The setting values stored in the hard disk drive return to the default or factory settings. After that, the navigation splash screen appears.

Completely returning the navigation system

To return the entire navigation system to the default or factory settings, initialize the navigation system in the following order:

1. Press the RESET button on the hardware.
2. Initialize the user data area on the hard disk drive.
3. Clear the learned data in the sensor.

1 Turn the ignition switch off.

2 Press the RESET button.

3 Start the engine.

After a few moments, the start-up screen comes on for a few seconds.

4 Touch and hold the MAP button while the start-up screen is displayed.

"Clear memory" screen appears.

5 Touch [Clear user information from hard disk].

- This reset operation clears all music data recorded in the music library. Note that the cleared data cannot be restored.

6 Touch [Yes].

The user area in the hard disk drive is initialized. After that, the navigation system restarts.

7 Press the MENU button and then touch [Settings].

The setting menu appears.

8 Touch [Hardware] and then touch [3D Calibration Status].

9 Touch [Learning Status] and then touch [Reset All].



Adjusting the Response Positions of the Touch Panels (Touch Panel Calibration)

If you feel that the touch keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel. There are two adjustment methods: 4-point adjustment, in which you touch four corners of the screen; and 16-point adjustment, in which you make fine-adjustments on the entire screen.

- Make sure to use the supplied stylus for adjustment, and gently touch the screen. If you press the touch panel forcefully, the touch panel may be damaged. Do not use a sharp pointed tool such as a ballpoint pen or a mechanical pen. Otherwise the screen is damaged.

Stylus (supplied with navigation system)



1 Press the V button.

The Picture Adjust screen appears.

2 Press and hold the V button for two seconds or more.

The 4-point touch panel adjustment screen appears.

3 Touch and hold each of the arrows on the four corners of the screen with the touch panel adjustment pen.

Hold the pen on the arrow until each one of the four arrows turns red.

